

Contents

Page

Foreword	vii
1.4 Manuals describing installation, operation, and maintenance	1
1.4.1 Introduction	1
1.4.2 Scope	1
1.4.3 Standard outline for IOM manuals	2
Appendix A Installation, Operation, and Maintenance Manual Reference Information	5
A.1 Introduction and safety	5
A.1.1 Marking and approvals (CE, ATEX, etc.)	5
A.1.2 Safety	5
A.1.2.1 Explanation of designations (safety terminology and symbols)	5
A.1.2.2 General guidelines	6
A.1.2.3 Safety labels	7
A.1.2.4 Material safety data sheet (MSDS)	12
A.1.2.5 Noise level data	12
A.1.2.6 Rigging and lifting	13
A.2 Transport and storage	13
A.2.1 Transport and handling requirements	13
A.2.2 Rigging and lifting	13
A.2.3 Receipt, inspection, and damage reporting	13
A.2.4 Unpacking	14
A.2.5 Storage	14
A.2.5.1 Recommended storage environment	14
A.2.5.2 Uncontrolled storage moisture protection	14
A.2.5.3 Short-term storage	15
A.2.5.4 Long-term storage	15
A.2.6 Disposal of packaging materials	16
A.3 Product description	16
A.3.1 Configuration	16
A.3.2 Nomenclature	16
A.3.2.1 Nameplate information	16
A.3.2.2 Pump	16
A.3.2.3 Parts	16
A.3.3 Auxiliaries	17
A.3.4 Support systems	17
A.4 Installation	17
A.4.1 Factory support requirements	17
A.4.2 Location	17

A.4.3	Foundation	17
A.4.3.1	Seismic analysis	17
A.4.4	Rigging and lifting	18
A.4.5	Baseplate	19
A.4.5.1	Leveling	19
A.4.5.2	Grouting	19
A.4.6	Piping and connections	19
A.4.6.1	Piping, general guidelines	19
A.4.6.2	Nozzle loads	22
A.4.6.3	Check valves	22
A.4.6.4	Strainers	22
A.4.7	Clearance setting	22
A.4.8	Alignment	22
A.4.8.1	Installation – horizontal pumps	22
A.4.8.2	Motor selection	26
A.4.8.3	Hot alignment considerations	26
A.4.9	Lubrication, priming, and cooling systems	26
A.4.10	Electrical	27
A.4.11	Control, monitoring, and alarm equipment	27
A.4.11.1	Stopping unit/reverse runaway speed	27
A.5	Commissioning, start-up, operation, and shut-down	29
A.5.1	Lubrication	29
A.5.2	Rotation	29
A.5.3	Guarding	29
A.5.4	Checklist – start-up	29
A.5.4.1	System flushing	29
A.5.4.2	Priming and filling	29
A.5.4.3	Shaft sealing settings and adjustments (mechanical seals, packing, etc.)	30
A.5.5	Start-up, operation, and shut-down	31
A.5.5.1	Minimum continuous flow	31
A.5.5.2	Minimum thermal flow	31
A.5.5.3	Lubrication system settings	31
A.5.5.4	Drive system settings	31
A.5.5.5	Valve settings and operation	31
A.5.5.6	Condition monitoring	32
A.5.5.7	Vibration (alarms and trip points)	32
A.5.5.8	Performance testing/verification	33
A.5.5.9	Bearing temperature	33
A.6	Maintenance	33
A.6.1	Schedule	33
A.6.1.1	Cold weather maintenance	34

A.6.1.2	Wear/parts replacements	34
A.6.2	Recommended spare parts for pumping units	34
A.6.3	Consumables	35
A.6.4	Required tools and fixtures	35
A.6.5	Fastener torques, rotation direction, and sequence	35
A.6.6	Pump decontamination	36
A.6.7	Disassembly	36
A.6.8	Inspection	36
A.6.8.1	Acceptance criteria and dimensions	36
A.6.8.2	Shaft straightening	36
A.6.9	Assembly	37
A.6.9.1	Clearances	37
A.6.10	Auxiliary equipment.	37
A.7	Troubleshooting guide	37
A.7.1	Hydraulic performance	37
A.7.1.1	Pressure	37
A.7.1.2	Flow	38
A.7.1.3	Power	39
A.7.2	Mechanical	39
A.7.2.1	Vibration	39
A.7.2.2	Measurement of operating temperature of ball bearings	39
A.7.2.3	Noise.	40
A.7.3	Electrical	40
A.8	Part listing and cross-sectional drawings	40
A.9	Certification	73
A.9.1	Why product certification matters	73
A.9.2	UL and CSA-US acceptance	73
A.9.3	Authorized testing locations	73
A.9.3.1	Underwriters Laboratories, Inc	74
A.9.3.2	Canadian Standards Association	75
A.10	Other relevant documentation and manuals	75
Appendix B	Index	76
Figures		
A.1	— Identification plate	16
A.2	— Typical foundation bolt design	18
A.3	— Discharge valve expansion joint	21
A.4	— Checking angular alignment	23
A.5	— Checking parallel alignment	24
A.6	— Dial indicator method of alignment	24

A.7 — Alignment of gear type coupling	25
A.8 — Alignment of spacer type couplings	26
A.9 — Reverse runaway speed ratio versus specific speed when head equals pump head at BEP (metric)	28
A.10 — Reverse runaway speed ratio versus specific speed when head equals pump head at BEP (US customary units)	28
A.11 — Instrument locations	40
A.12 — Rotodynamic pump types - overhung	41
A.13 — Overhung impeller – flexibly coupled – single stage – axial flow – horizontal.	42
A.14 — Overhung impeller – flexibly coupled – single stage – frame mounted.	43
A.15 — Overhung impeller – flexibly coupled – single stage – frame mounted – lined pump	44
A.16 — Stock pump – flexibly coupled – single stage – foot mounted	45
A.17 — Overhung impeller – flexibly coupled – single stage – foot mounted – mixed flow.	46
A.18 — Overhung impeller – flexibly coupled – single stage – foot mounted – ASME B73.1	47
A.19 — Overhung impeller – flexibly coupled – single stage – foot mounted – self-priming	48
A.20 — Overhung impeller – flexibly coupled – single stage – centerline mounted – API 610	49
A.21 — Overhung impeller – integral bearing frame – single stage – in-line – flexible coupling	50
A.22 — Vertical end suction OH3A	51
A.23 — Overhung impeller – rigidly coupled – single stage – vertical in-line.	52
A.24 — Overhung impeller – close coupled – single stage – in-line (showing seal and packing)	53
A.25 — Vertical end suction OH5A – close coupled – built together	54
A.26 — High speed – integral gear – close coupled – single stage.	55
A.27 — Overhung impeller – close coupled – single stage – end suction.	56
A.28 — Overhung impeller – close coupled – single stage – diffuser style – end suction – submersible	57
A.29 — Overhung impeller – close coupled – single stage – volute style – end suction submersible.	58
A.30 — Pitot pump – flexibly coupled – single stage – frame mounted.	59
A.31 — Rotodynamic pump types - between bearings	60
A.32 — Impeller between bearings – flexibly coupled – single stage – axial (horizontal) split case	61
A.33 — Impeller between bearings – flexibly coupled – single stage – radial split case	62
A.34 — Impeller between bearings – flexibly coupled – multistage axial (horizontal) split case	63
A.35 — Impeller between bearings – flexibly coupled – multistage – radial split case	64
A.36 — Impeller between bearings – flexibly coupled – multistage – radial split double casing	65
A.37 — Rotodynamic pump types - vertically suspended	66
A.38 — Lineshaft design sump pump	67
A.39 — Cantilever shaft design sump pump	68
A.40 — Rotodynamic pump types - regenerative turbine	69
A.41 — Regenerative turbine – side channel single stage	70
A.42 — Regenerative turbine – peripheral single stage	71
A.43 — Regenerative turbine – impeller between bearings – two stage	72