

# Contents

Page

Foreword .....	ix
14.4 Manuals describing installation, operation, and maintenance .....	1
14.4.1 Introduction .....	1
14.4.1.1 Purpose .....	1
14.4.1.2 Scope .....	1
14.4.1.3 Units, Symbols, and Subscripts .....	1
14.4.2 Standard outline for IOM manuals .....	1
Appendix A Installation, Operation, and Maintenance Manual Reference Information .....	4
A.1 Introduction and safety .....	4
A.1.1 Marking and approvals (UL, CSA, NSF, CE, ATEX, etc.) .....	4
A.1.2 Safety .....	4
A.1.2.1 Personal protective equipment .....	4
A.1.2.2 Manufacturer's responsibility .....	4
A.1.2.3 Explanation of designations (safety terminology and symbols) .....	5
A.1.2.4 Rigging and lifting .....	5
A.1.2.5 General guidelines .....	5
A.1.2.5.1 Safety training .....	6
A.1.2.5.2 Safety data sheet (SDS) .....	6
A.1.2.5.3 Personnel qualification and training .....	6
A.1.2.5.4 Personnel safety actions .....	6
A.1.2.5.5 Products used in potentially explosive atmospheres .....	9
A.1.2.5.5.1 Scope of compliance .....	9
A.1.2.5.5.2 ATEX marking example .....	9
A.1.2.5.5.3 Avoiding excessive surface temperatures .....	10
A.1.2.5.5.4 Preventing the buildup of explosive mixtures .....	11
A.1.2.5.5.5 Preventing sparks .....	11
A.1.2.5.5.6 Preventing leakage .....	12
A.1.2.5.5.7 Maintenance to avoid hazards with a potential of explosion .....	12

A.1.2.6	Noise level data . . . . .	12
A.1.2.7	Rigging and lifting . . . . .	13
A.2	Transport and storage . . . . .	13
A.2.1	Transport and handling requirements . . . . .	13
A.2.2	Rigging and lifting . . . . .	13
A.2.3	Receipt, inspection, and damage reporting . . . . .	14
A.2.4	Unpacking . . . . .	15
A.2.5	Storage . . . . .	15
A.2.5.1	Recommended storage environment . . . . .	15
A.2.5.2	Uncontrolled storage moisture protection . . . . .	15
A.2.5.3	Precautions when stored in potential freezing temperatures . . . . .	16
A.2.5.4	Short-term storage . . . . .	16
A.2.5.4	Long-term storage . . . . .	17
A.2.6	Disposal of packaging materials . . . . .	17
A.3	Product description . . . . .	17
A.3.1	Configuration . . . . .	17
A.3.2	Nomenclature . . . . .	17
A.3.2.1	Nameplate information . . . . .	18
A.3.2.2	Parts . . . . .	18
A.3.3	Auxiliaries . . . . .	18
A.3.4	Support systems . . . . .	18
A.4	Installation . . . . .	18
A.4.1	Factory support requirements . . . . .	18
A.4.2	Location . . . . .	18
A.4.2.1	Checking wells . . . . .	19
A.4.2.2	Checking wet pits . . . . .	19
A.4.3	Foundation . . . . .	19
A.4.3.1	Seismic analysis . . . . .	20
A.4.4	Rigging and lifting for installation . . . . .	20
A.4.5	Baseplate / Sole Plate . . . . .	20

A.4.5.1	Leveling . . . . .	20
A.4.5.2	Grouting . . . . .	21
A.4.6	Pump systems. . . . .	22
A.4.6.1	Piping, general guidelines. . . . .	22
A.4.6.1.1	Pipe supports/anchors/joints . . . . .	22
A.4.6.1.2	Inlet piping requirements . . . . .	23
A.4.6.1.3	Pipe reducers . . . . .	24
A.4.6.1.4	Inlet valves and manifolds . . . . .	24
A.4.6.1.5	Elbow at pump inlet . . . . .	24
A.4.6.1.6	Inlet supply tanks . . . . .	25
A.4.6.1.7	Submersible motor cooling . . . . .	25
A.4.6.1.8	Outlet valves . . . . .	25
A.4.6.1.9	Air release for self-priming pumps. . . . .	26
A.4.6.1.10	Siphons . . . . .	26
A.4.6.1.11	Check valves . . . . .	26
A.4.6.2	Strainers . . . . .	27
A.4.7	Vertical pump, lift (clearance) setting . . . . .	27
A.4.8	Alignment . . . . .	28
A.4.8.1	Alignment general, horizontal pumps . . . . .	28
A.4.8.1.1	Shaft/coupling alignment . . . . .	28
A.4.8.1.2	Straightedge method of alignment. . . . .	28
A.4.8.1.3	Dial indicator method of alignment . . . . .	30
A.4.8.1.4	Alignment of shafts with spacer couplings. . . . .	31
A.4.8.1.5	Laser method of alignment . . . . .	31
A.4.8.1.6	Special couplings. . . . .	32
A.4.8.1.7	V-belt drive. . . . .	32
A.4.8.1.8	Protective guarding . . . . .	32
A.4.8.1.9	Hot alignment considerations . . . . .	32
A.4.8.2	Alignment, vertically suspended pumps . . . . .	32
A.4.8.2.1	Vertical solid shaft drivers . . . . .	33
A.4.8.2.2	Vertical hollow shaft drivers. . . . .	33

A.4.9	Special driver (motor) considerations for submersible vertical turbine units . . . . .	34
A.4.9.1	Submersible bore hole pump motor selection. . . . .	34
A.4.9.2	Types of cable for submersible motors . . . . .	35
A.4.9.3	Lightning and surge protection for submersible motors . . . . .	35
A.4.10	IOM installation check list . . . . .	35
A.4.11	Lubrication, priming, and cooling systems . . . . .	36
A.4.12	Electrical . . . . .	36
A.4.13	Control, monitoring, and alarm equipment . . . . .	36
A.4.14	Stopping unit/reverse runaway speed . . . . .	37
A.4.14.1	Stopping unit/reverse runaway speed for vertical pumps . . . . .	37
A.5	Commissioning, start-up, operation, and shut-down. . . . .	37
A.5.1	Lubrication . . . . .	37
A.5.1.1	Vertically suspended pumps, line shaft. . . . .	38
A.5.1.2	Type of lube filtration . . . . .	38
A.5.2	Rotation. . . . .	38
A.5.2.1	Rotation, considerations for vertical pumps . . . . .	38
A.5.3	Guarding . . . . .	39
A.5.4	Start-up considerations . . . . .	39
A.5.4.1	System flushing. . . . .	39
A.5.4.2	Priming and filling . . . . .	39
A.5.4.2.1	Priming by ejector or exhauster. . . . .	40
A.5.4.2.2	Priming by vacuum pumps . . . . .	40
A.5.4.3	Shaft sealing settings and adjustments (mechanical seals, packing, etc.) . . . . .	40
A.5.4.3.1	Packed stuffing box . . . . .	40
A.5.4.3.2	Mechanical seals . . . . .	41
A.5.5	Start-up, operation, and shut-down. . . . .	42
A.5.5.1	Minimum continuous flow . . . . .	42
A.5.5.2	Minimum thermal flow . . . . .	42
A.5.5.3	Drive system settings . . . . .	42
A.5.5.4	Valve settings and operation. . . . .	42

A.5.5.4.1	Valve setting at start-up . . . . .	42
A.5.5.4.1.1	Position of outlet valve on starting, high or medium head pumps . . . . .	42
A.5.5.4.1.2	Position of outlet valve on starting, mixed or axial flow pumps . . . . .	42
A.5.5.4.2	Valve settings and operation (timing). . . . .	42
A.5.5.4.2.1	Across-the-line or reduced voltage start . . . . .	42
A.5.5.4.3	Warning against closed valve operation . . . . .	42
A.5.5.4.4	Reduced flow/minimum flow outlet bypass . . . . .	43
A.5.5.4.5	Water (hydraulic) hammer . . . . .	43
A.5.5.5	Parallel and series operation. . . . .	43
A.5.5.6	Shut-down. . . . .	43
A.5.5.7	Condition monitoring . . . . .	44
A.5.5.8	Vibration (alarms and trip points) . . . . .	44
A.5.5.8.1	Noise in pumping machinery . . . . .	44
A.5.5.8.2	Hydraulic resonance in piping . . . . .	44
A.5.5.9	Performance testing/verification . . . . .	45
A.5.5.9.1	Bearing temperature . . . . .	45
A.6	Maintenance . . . . .	45
A.6.1	Schedule . . . . .	45
A.6.1.1	Cold weather maintenance . . . . .	46
A.6.2	Wear/parts replacements . . . . .	46
A.6.2.1	Wear/parts replacements for rotodynamic pumps . . . . .	46
A.6.2.2	Wear/parts replacements for vertically suspended pumps . . . . .	47
A.6.3	Consumables . . . . .	47
A.6.4	Tools and fixtures . . . . .	48
A.6.5	Fastener torques, rotation direction, and sequence . . . . .	48
A.6.6	Pump decontamination . . . . .	48
A.6.7	Disassembly . . . . .	49
A.6.8	Inspection . . . . .	49
A.6.8.1	Acceptance criteria and dimensions . . . . .	49
A.6.8.2	Shaft straightening . . . . .	49

A.6.9	Assembly . . . . .	50
A.6.9.1	Adjustments, clearance and final settings . . . . .	50
A.6.10	Auxiliary equipment . . . . .	50
A.7	Trouble shooting guide . . . . .	50
A.7.1	Mechanical verification . . . . .	55
A.7.1.1	Allowable vibration . . . . .	55
A.7.1.2	Bearing operating temperature . . . . .	55
A.7.1.3	Noise or sound in rotodynamic pumps . . . . .	55
A.7.2	Electrical . . . . .	55
A.8	Parts listing and cross-sectional drawings . . . . .	56
A.9	Other relevant documentation and certification . . . . .	56
A.9.1	Why product certification matters . . . . .	56
Index	. . . . .	57

Figures

A.3	— Identification plate . . . . .	17
A.4.5	— Typical foundation bolt, leveling screw and grout details . . . . .	21
A.4.6.1	— Typical expansion joint with tie rods . . . . .	22
A.4.6.1.2	— Typical deep-well type installation . . . . .	23
A.4.6.2	— Pump system with eccentric reducer in inlet pipe . . . . .	24
A.4.6.1.8	— Outlet valves . . . . .	26
A.4.8.1.2a	— Checking angular alignment . . . . .	29
A.4.8.1.2b	— Checking parallel alignment . . . . .	29
A.4.8.1.3	— Dial Indicator method of alignment . . . . .	30
A.4.8.1.4	— Alignment of spacer-type couplings . . . . .	31
A.4.8.1.5	— Laser method of alignment . . . . .	32
A.5.4.4.1	— Packed-type stuffing box . . . . .	41
A.7.1.2	— Locations for the measurement of bearing temperature . . . . .	55