

Contents

Page

| | |
|--|----|
| Foreword | ix |
| 14.4 Manuals describing installation, operation, and maintenance | 1 |
| 14.4.1 Introduction | 1 |
| 14.4.1.1 Purpose | 1 |
| 14.4.1.2 Scope | 1 |
| 14.4.1.3 Units, Symbols, and Subscripts | 1 |
| 14.4.2 Standard outline for IOM manuals | 1 |
| Appendix A Installation, Operation, and Maintenance Manual Reference Information | 4 |
| A.1 Introduction and safety | 4 |
| A.1.1 Marking and approvals (UL, CSA, NSF, CE, ATEX, etc.) | 4 |
| A.1.2 Safety | 4 |
| A.1.2.1 Personal protective equipment | 4 |
| A.1.2.2 Manufacturer's responsibility | 4 |
| A.1.2.3 Explanation of designations (safety terminology and symbols) | 5 |
| A.1.2.4 Rigging and lifting | 5 |
| A.1.2.5 General guidelines | 5 |
| A.1.2.5.1 Safety training | 6 |
| A.1.2.5.2 Safety data sheet (SDS) | 6 |
| A.1.2.5.3 Personnel qualification and training | 6 |
| A.1.2.5.4 Personnel safety actions | 6 |
| A.1.2.5.5 Products used in potentially explosive atmospheres | 9 |
| A.1.2.5.5.1 Scope of compliance | 9 |
| A.1.2.5.5.2 ATEX marking example | 9 |
| A.1.2.5.5.3 Avoiding excessive surface temperatures | 10 |
| A.1.2.5.5.4 Preventing the buildup of explosive mixtures | 11 |
| A.1.2.5.5.5 Preventing sparks | 11 |
| A.1.2.5.5.6 Preventing leakage | 12 |
| A.1.2.5.5.7 Maintenance to avoid hazards with a potential of explosion | 12 |

| | | |
|---------|--|----|
| A.1.2.6 | Noise level data | 12 |
| A.1.2.7 | Rigging and lifting | 13 |
| A.2 | Transport and storage | 13 |
| A.2.1 | Transport and handling requirements | 13 |
| A.2.2 | Rigging and lifting | 13 |
| A.2.3 | Receipt, inspection, and damage reporting | 14 |
| A.2.4 | Unpacking | 15 |
| A.2.5 | Storage | 15 |
| A.2.5.1 | Recommended storage environment | 15 |
| A.2.5.2 | Uncontrolled storage moisture protection | 15 |
| A.2.5.3 | Precautions when stored in potential freezing temperatures | 16 |
| A.2.5.4 | Short-term storage | 16 |
| A.2.5.4 | Long-term storage | 17 |
| A.2.6 | Disposal of packaging materials | 17 |
| A.3 | Product description | 17 |
| A.3.1 | Configuration | 17 |
| A.3.2 | Nomenclature | 17 |
| A.3.2.1 | Nameplate information | 18 |
| A.3.2.2 | Parts | 18 |
| A.3.3 | Auxiliaries | 18 |
| A.3.4 | Support systems | 18 |
| A.4 | Installation | 18 |
| A.4.1 | Factory support requirements | 18 |
| A.4.2 | Location | 18 |
| A.4.2.1 | Checking wells | 19 |
| A.4.2.2 | Checking wet pits | 19 |
| A.4.3 | Foundation | 19 |
| A.4.3.1 | Seismic analysis | 20 |
| A.4.4 | Rigging and lifting for installation | 20 |
| A.4.5 | Baseplate / Sole Plate | 20 |

| | | |
|------------|--|----|
| A.4.5.1 | Leveling | 20 |
| A.4.5.2 | Grouting | 21 |
| A.4.6 | Pump systems. | 22 |
| A.4.6.1 | Piping, general guidelines. | 22 |
| A.4.6.1.1 | Pipe supports/anchors/joints | 22 |
| A.4.6.1.2 | Inlet piping requirements | 23 |
| A.4.6.1.3 | Pipe reducers | 24 |
| A.4.6.1.4 | Inlet valves and manifolds | 24 |
| A.4.6.1.5 | Elbow at pump inlet | 24 |
| A.4.6.1.6 | Inlet supply tanks | 25 |
| A.4.6.1.7 | Submersible motor cooling | 25 |
| A.4.6.1.8 | Outlet valves | 25 |
| A.4.6.1.9 | Air release for self-priming pumps. | 26 |
| A.4.6.1.10 | Siphons | 26 |
| A.4.6.1.11 | Check valves | 26 |
| A.4.6.2 | Strainers | 27 |
| A.4.7 | Vertical pump, lift (clearance) setting | 27 |
| A.4.8 | Alignment | 28 |
| A.4.8.1 | Alignment general, horizontal pumps | 28 |
| A.4.8.1.1 | Shaft/coupling alignment. | 28 |
| A.4.8.1.2 | Straightedge method of alignment. | 28 |
| A.4.8.1.3 | Dial indicator method of alignment | 30 |
| A.4.8.1.4 | Alignment of shafts with spacer couplings. | 31 |
| A.4.8.1.5 | Laser method of alignment | 31 |
| A.4.8.1.6 | Special couplings. | 32 |
| A.4.8.1.7 | V-belt drive. | 32 |
| A.4.8.1.8 | Protective guarding | 32 |
| A.4.8.1.9 | Hot alignment considerations | 32 |
| A.4.8.2 | Alignment, vertically suspended pumps | 32 |
| A.4.8.2.1 | Vertical solid shaft drivers | 33 |
| A.4.8.2.2 | Vertical hollow shaft drivers. | 33 |

| | | |
|-----------|--|----|
| A.4.9 | Special driver (motor) considerations for submersible vertical turbine units | 34 |
| A.4.9.1 | Submersible bore hole pump motor selection. | 34 |
| A.4.9.2 | Types of cable for submersible motors | 35 |
| A.4.9.3 | Lightning and surge protection for submersible motors | 35 |
| A.4.10 | IOM installation check list | 35 |
| A.4.11 | Lubrication, priming, and cooling systems | 36 |
| A.4.12 | Electrical | 36 |
| A.4.13 | Control, monitoring, and alarm equipment | 36 |
| A.4.14 | Stopping unit/reverse runaway speed | 37 |
| A.4.14.1 | Stopping unit/reverse runaway speed for vertical pumps | 37 |
| A.5 | Commissioning, start-up, operation, and shut-down. | 37 |
| A.5.1 | Lubrication | 37 |
| A.5.1.1 | Vertically suspended pumps, line shaft. | 38 |
| A.5.1.2 | Type of lube filtration | 38 |
| A.5.2 | Rotation. | 38 |
| A.5.2.1 | Rotation, considerations for vertical pumps | 38 |
| A.5.3 | Guarding | 39 |
| A.5.4 | Start-up considerations | 39 |
| A.5.4.1 | System flushing. | 39 |
| A.5.4.2 | Priming and filling | 39 |
| A.5.4.2.1 | Priming by ejector or exhauster. | 40 |
| A.5.4.2.2 | Priming by vacuum pumps | 40 |
| A.5.4.3 | Shaft sealing settings and adjustments (mechanical seals, packing, etc.) | 40 |
| A.5.4.3.1 | Packed stuffing box | 40 |
| A.5.4.3.2 | Mechanical seals | 41 |
| A.5.5 | Start-up, operation, and shut-down. | 42 |
| A.5.5.1 | Minimum continuous flow | 42 |
| A.5.5.2 | Minimum thermal flow | 42 |
| A.5.5.3 | Drive system settings | 42 |
| A.5.5.4 | Valve settings and operation. | 42 |

| | | |
|-------------|---|----|
| A.5.5.4.1 | Valve setting at start-up | 42 |
| A.5.5.4.1.1 | Position of outlet valve on starting, high or medium head pumps | 42 |
| A.5.5.4.1.2 | Position of outlet valve on starting, mixed or axial flow pumps | 42 |
| A.5.5.4.2 | Valve settings and operation (timing). | 42 |
| A.5.5.4.2.1 | Across-the-line or reduced voltage start | 42 |
| A.5.5.4.3 | Warning against closed valve operation | 42 |
| A.5.5.4.4 | Reduced flow/minimum flow outlet bypass | 43 |
| A.5.5.4.5 | Water (hydraulic) hammer | 43 |
| A.5.5.5 | Parallel and series operation. | 43 |
| A.5.5.6 | Shut-down. | 43 |
| A.5.5.7 | Condition monitoring | 44 |
| A.5.5.8 | Vibration (alarms and trip points) | 44 |
| A.5.5.8.1 | Noise in pumping machinery | 44 |
| A.5.5.8.2 | Hydraulic resonance in piping | 44 |
| A.5.5.9 | Performance testing/verification | 45 |
| A.5.5.9.1 | Bearing temperature | 45 |
| A.6 | Maintenance | 45 |
| A.6.1 | Schedule | 45 |
| A.6.1.1 | Cold weather maintenance | 46 |
| A.6.2 | Wear/parts replacements | 46 |
| A.6.2.1 | Wear/parts replacements for rotodynamic pumps | 46 |
| A.6.2.2 | Wear/parts replacements for vertically suspended pumps | 47 |
| A.6.3 | Consumables | 47 |
| A.6.4 | Tools and fixtures | 48 |
| A.6.5 | Fastener torques, rotation direction, and sequence | 48 |
| A.6.6 | Pump decontamination | 48 |
| A.6.7 | Disassembly | 49 |
| A.6.8 | Inspection | 49 |
| A.6.8.1 | Acceptance criteria and dimensions | 49 |
| A.6.8.2 | Shaft straightening | 49 |

| | | |
|---------|--|----|
| A.6.9 | Assembly | 50 |
| A.6.9.1 | Adjustments, clearance and final settings | 50 |
| A.6.10 | Auxiliary equipment | 50 |
| A.7 | Trouble shooting guide | 50 |
| A.7.1 | Mechanical verification | 55 |
| A.7.1.1 | Allowable vibration | 55 |
| A.7.1.2 | Bearing operating temperature | 55 |
| A.7.1.3 | Noise or sound in rotodynamic pumps | 55 |
| A.7.2 | Electrical | 55 |
| A.8 | Parts listing and cross-sectional drawings | 56 |
| A.9 | Other relevant documentation and certification | 56 |
| A.9.1 | Why product certification matters | 56 |
| Index | | 57 |

Figures

| | | |
|------------|---|----|
| A.3 | — Identification plate | 17 |
| A.4.5 | — Typical foundation bolt, leveling screw and grout details | 21 |
| A.4.6.1 | — Typical expansion joint with tie rods | 22 |
| A.4.6.1.2 | — Typical deep-well type installation | 23 |
| A.4.6.2 | — Pump system with eccentric reducer in inlet pipe | 24 |
| A.4.6.1.8 | — Outlet valves | 26 |
| A.4.8.1.2a | — Checking angular alignment | 29 |
| A.4.8.1.2b | — Checking parallel alignment | 29 |
| A.4.8.1.3 | — Dial Indicator method of alignment | 30 |
| A.4.8.1.4 | — Alignment of spacer-type couplings | 31 |
| A.4.8.1.5 | — Laser method of alignment | 32 |
| A.5.4.4.1 | — Packed-type stuffing box | 41 |
| A.7.1.2 | — Locations for the measurement of bearing temperature | 55 |